



# Installation Instructions Tankless Water Heater **POWER PAK PLUS** *By Marey*



---

## **ELECTRICAL REQUIREMENTS FOR INSTALLATION:**

- 220 V – 240 V Circuit
- 40 amps breaker
- Receptacle and connector for #8 AWG cord

## **INSTALLATION INSTRUCTIONS:**

1. Install the unit in vertical position, without lying on the side. Water inlet right side, outlet left side.
2. Before connecting the water heater to the water main line; clean all impurities from the existing water pipe line by allowing water to flow for a few minutes.
3. Once installed, let the water run through the unit before connecting the electricity.
4. Connect the electricity. Now you can start using your heater. Just open the water faucet and control the water temperature with the pressure of water.

## HOW TO USE YOUR HEATER:

- Turn on the faucet. Indicator lamp lights up to show that power has been turned on. Hot water then comes out.
- Turn the knob either clockwise clockwise or counter-clockwise until desired temperature is obtained.
- Temperature of the water can also be set by increasing or decreasing the flow of water. For each set setting of the Temperature Adjustment knob, a larger flow of water will result in lower temperature, while a smaller flow will result in hotter water.
- After using, turn the faucet off. Indicator lamp switches off, which indicates that power to the heater has been automatically cut off.

## TROUBLE SOLVING:

1. Check the water pressure or the electrical connection of the heater unit when:
  - a. The indicator lamp does not light up after the faucet has been turned on.
  - b. The indicator lamp switches off and the water turns cold even if the faucet is still open.
2. There could be an obstruction present if water does not flow, even if the water pressure is sufficient. Remove and wash the filter located at the water inlet valve.
3. If the indicator lamp does not switch off when faucet is turned off, it is possible that:
  - a. Water is leaking inside the water heater
  - b. There is an obstruction to the flow of water
  - c. There is something wrong in the electrical connection.

## WARRANTY

One year in parts and labour